



HILYTE LEADER GRP 500 TOWER


Maximum safe working load for the Fiberglass Scaffold tower is 900KG. This is not to include the tower self-weight. The maximum capacity on each working level for single width is 200KG. The maximum capacity on each working level for double width is 400KG. The individual platforms have a maximum load of 200KG.

All our user guides are compiled in order to give the user step by step instructions to ensure the product is assembled correctly and to the latest safety standard for use when working at height.

The law requires that anyone assembling and using a tower be competent to do so and should also have a copy of the correct manufacturer's instructions.

If you require further information on this please see the PASMA Operators Code of Practice or call us on **01792 796666**.

www.lyteladders.co.uk

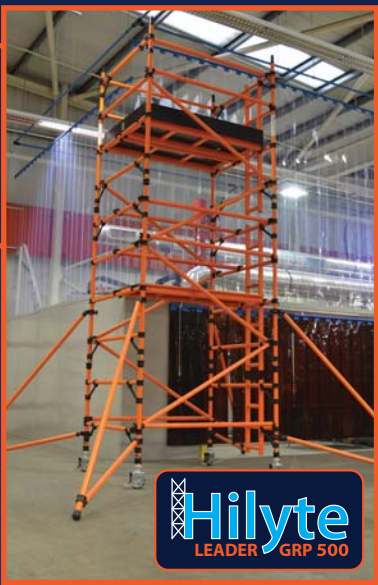

PLEASE READ THIS SECTION CAREFULLY

The Hilyte Leader GRP (fiberglass) 500 towers are light-weight mobile scaffold towers for use in Zone 1 applications where aluminium or steel systems are either unsafe or unsuitable and used extensively for indoor and outdoor use, due to their inherent collective fall prevention measures. These instructions take into account the latest regulations, guidance and all product standards and is intended to give guidance on the best practice for the assembly and dismantling of access towers. These instructions must always be used in conjunction with a suitable and sufficient Risk Assessment relative to the project. Current regulations require that any person assembling and using towers must be competent and qualified to do so. For full information on the correct assembly and use of mobile access towers, consult the PASMA Operators Code of Practice (Revision 12.6). Contact PASMA at: PASMA, PO Box 26929, Glasgow, G3 9DR.

Safety Notes

Before assembly

1. Ensure that the instruction guide has been read and understood by anyone using the equipment. If in doubt contact your supplier.
2. Lyte Industries recommend two competent persons are used to build the range of Lyte Towers. On towers above 4mtrs it is an ESSENTIAL requirement that at least two persons are used.
3. Always ensure that the necessary components are available and inspected for damage and wear prior to assembly. DAMAGED OR INCORRECT COMPONENTS SHALL NOT BE USED.
4. Ensure the ground level is suitably firm and clear of obstruction.
5. All tower frames must be lifted and lowered from the inside of the stabiliser footprint. It is acceptable to lift frames with the aid of a rope, secured with a reliable knot.
6. The life of tower components will be increased if proper care is taken of them during handling, assembling, transportation and storage. All components should be inspected after storage and transport.
7. Stabilisers shall always be fitted when specified.
8. Mobile access towers are not designed to be lifted or suspended.

LYTE RECOMMENDS ALL TOWERS ARE TIED IN SECURELY WHERE POSSIBLE

Whilst assembling a tower

1. Outdoor freestanding towers must not exceed a platform height of 8.2m, for indoor use the maximum platform height is 12.2m. To ensure maximum stability is achieved, stabilisers or outriggers must be fitted at the first available opportunity, usually after the first module is complete. The quantity schedule overleaf illustrates the correct stabiliser units required for each platform height.
2. Always take into account the ground conditions i.e. are they capable of withstanding the loads imposed by the scaffolding.
3. Ensure the tower is level and vertical.
4. Ensure that the tower is not overloaded and that working loads are adhered to.
5. The Work at Height Regulations 2005 state that all platforms – from which a person is possible to fall a distance liable to cause personal injury – must be fitted with guardrails at a minimum height of 950mm above the platform itself. In addition to this, current regulations require intermediate guardrails be fitted to leave a gap no more than 470mm.
6. Toe boards are mandatory at all places of work from which it is possible that tools, equipment or other material may fall and is liable to cause personal injury. Their use on intermediate or rest platforms is not compulsory unless a risk assessment identifies a risk.

Whilst using the tower

1. Do not exceed the safe working load of the tower.
2. Ensure that castors are locked and that the Tower is both level and vertical.
3. All Lyte Industrial Towers must be climbed from the inside using the frames provided, no other means of access is acceptable.
4. Beware of high wind conditions; tie the tower to a rigid structure when working outdoors or in exposed conditions. Always refer to Beaufort Scale Force chart below.

The Beaufort Scale

Beaufort Scale	Description	Air Speed	Action
0	Calm, smoke rises easily	1mph	None required
<3	Leaves & small twigs in constant motion, wind extends light flag	12mph	No immediate action required
4	Moderate breeze, small branches move	17mph	Cease work
5	Strong breeze, large Branches bend	25mph	Tie tower to a rigid structure
>6	Walking progress impeded	40mph	Dismantle tower if such conditions are expected

Whilst using the tower continued

- 5. If a tower is left unattended, it must be secured against unauthorised usage or adverse weather conditions.
- 6. Adjustable legs are intended only to level the tower and never to gain additional tower height.
- 7. For linking towers or special applications, always consult your supplier.
- 8. Care must be taken when using power tools, jet washers or other tools that impose side loads.
The maximum side load on a freestanding tower is 20kgs.
- 9. It is not permissible to attach bridging between a tower and a building.
- 10. Never jump onto platforms.
- 11. Towers used outdoors shall, wherever possible, be secured to a building or other structure.

Before moving a tower

- 1. Towers should only be moved with the utmost caution. Before moving, ensure the route is clear of any obstructions, both at ground level and overhead (particularly overhead cables).
- 2. Never attempt to move a tower with people or materials still on it.
- 3. Ensure the tower height is reduced to 4m when stabilisers are in the correct position.
Reduce tower to 2m when stabilisers are in the incorrect position before moving.
- 4. Stabilisers should be left fitted in position, though raised no more than 25mm from the ground.
- 5. Move the tower only by applying manual effort, pushing at the base of the tower.
- 6. NEVER MOVE A TOWER IF WIND LEVELS ARE ABOVE 3 ON THE BEAUFORT SCALE.

After moving the tower

- 1. Always inspect the tower after moving and before use.
- 2. Always refer to the instructions in this guide.
- 3. Never throw equipment from the tower, either lower it with a rope or by hand.
- 4. Any components found to be damaged should be isolated, tagged and reported to someone in authority to either have them repaired or removed from service.
- 5. In accordance with current regulations any tower that has been assembled must be checked every 7 days (minimum) to ensure that the tower continues to comply with the regulations.

Stabilisers

STABILISERS OR OUTRIGGERS SHALL ALWAYS BE FITTED WHEN SPECIFIED.

For fitting standard and large stabilisers.

- 1. Fix one stabiliser to each corner of the Tower at approx. 45 degrees.
- 2. Attach top clamp but leave loose
- 3. Attach bottom clamp then adjust top and bottom arms so foot is firmly in contact with the ground then tighten both clamps
- 4. If using large stabilisers connect all 3 clamps then adjust booms ensuring foot is firmly in contact with the ground.
Tighten all clamps

Maximum Safe Working Load (SWL)

The maximum SWL for the Hilyte Leader GRP Tower is 900kg less the tower self-weight.
The maximum SWL per platform is 200kg uniformly spread.
Single width tower – 200kg per platform level.
Double width tower – 400kg per platform level.

- A** - Toe Board Set

B - Hatch Deck

C - Diagonal Brace

D - Stabiliser

E - 2, 3, 4 Rung Ladder Frame
- F** - Horizontal Brace

G - Standard Deck


H - Adjustable Leg

I - Castor

J - 2, 3, 4 Rung Span Frame

Hilyte Leader GRP 500 Tower component weights schedule

The Maximum safe working load (the combined weight of the users, tools and materials) that may be placed on the tower is the total weight less the self weight of the tower (see schedule below).
For example, a single width tower built using the 3T method with a 5.7m platform height and platform length of 1.8m has a self-weight of 221.29kg.
900kg - 221.29kg = **678.7kg Maximum safe working load**

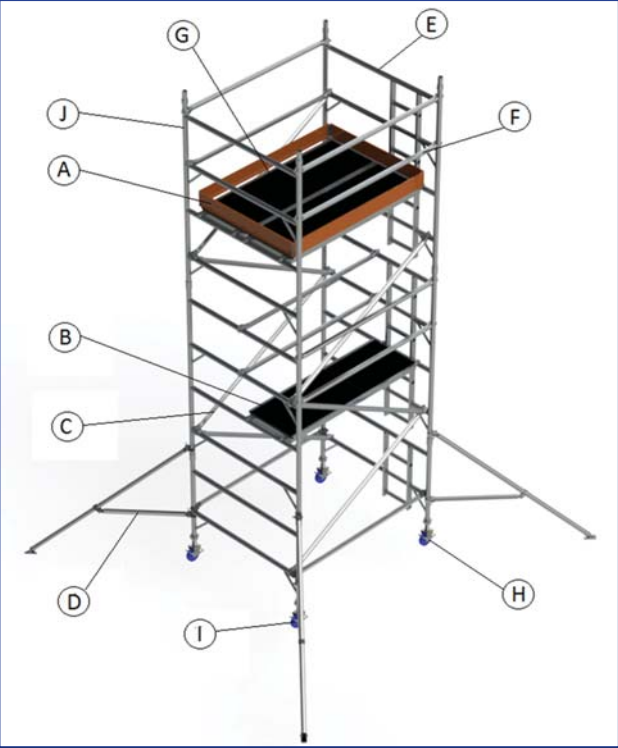

Single Width																					
Platform Height	2.2	2.7	3.2	3.7	4.2	4.7	5.2	5.7	6.2	6.7	7.2	7.7	8.2	8.7	9.2	9.7	10.2	10.7	11.2	11.7	12.2
900 (kg)	115.64	141.87	154.6	166.22	170.71	205.18	209.67	221.29	240.5	274.97	279.46	291.08	295.57	330.04	334.53	346.15	350.64	385.11	389.6	401.22	405.71
Safe working load (kg)	784.4	758.1	745.4	733.8	729.3	694.8	690.3	678.7	659.5	625.0	620.5	608.9	604.4	570.0	565.5	553.9	549.4	514.9	510.4	498.8	494.3

Double Width																					
Platform Height	2.2	2.7	3.2	3.7	4.2	4.7	5.2	5.7	6.2	6.7	7.2	7.7	8.2	8.7	9.2	9.7	10.2	10.7	11.2	11.7	12.2
900 (kg)	120.09	169.51	183.01	197.45	202.71	237.81	243.07	257.51	277.49	312.59	317.85	332.29	337.55	372.65	377.91	392.35	397.61	432.71	437.97	452.41	457.67
Safe working load (kg)	779.91	730.49	716.99	702.55	697.29	662.19	656.93	642.49	622.51	587.41	582.15	567.71	562.45	527.35	522.09	507.65	502.39	467.29	462.03	447.59	442.33

Assembly Checklist

These checks must be completed directly after the Tower has been built and before each consecutive use.

- Always inspect components before assembling the tower.
- Always inspect the tower before using.
- Ensure that the tower is upright and square.
- Ensure castors are locked.
- Ensure legs are correctly adjusted.
- Ensure all horizontal braces and platforms are level.
- Ensure stabilisers are fitted as specified in the instruction manual.
- Ensure platforms are correctly located and anti-lift locks are on.
- Ensure all handrails are in place.

- Ensure Toeboards are correctly fitted as illustrated in the instruction manual.
- Always check whether the structure assembly is still correct and complete.
- Check that no environmental changes have influenced the safe use of the mobile tower.
- At no time is it acceptable to extend the height of the platform by use of ladders, boxes or other devices.

Always refer to this checklist before and after assembly of the tower.

If in doubt about any application consult your supplier for advice.
PLEASE REMEMBER: A thorough risk assessment must be carried out prior to any work being carried out at height.

4.2m Tower Build

1: Fit leg and castor assembly into the 2 rung ladder frame, repeat with the 2 rung span frame.

2: Fit the 1st horizontal brace on frame horizontal at Ladder side then the 2nd on the upright as shown.

3: Attach both horizontal braces to the span frame as shown in the illustration.

4: Fit 4 rung ladder and span frames, ensure the circlips are locked.

5: Fit 2 diagonal braces in opposing direction from the 1st rung to the 3rd rung as shown.

6: Place platform on the 4th rung ensuring hatch is to the ladder end and it opens outwards. Ensure wind clips are locked.

7: Fit stabilisers ensuring that the maximum footprint is achieved.

8: Fit another 2 diagonal braces diagonally opposed from the 3rd rung to the 5th rung.



9: Using the 3t method of assembly, fit horizontal bracing on the 5th and 6th rungs above the hatch platform. The platform is now safe to stand on.

10: Fit 4 rung ladder and span frames ensuring the circlips are locked.

11: Fit 2 diagonal braces diagonally opposed from the 5th rung to the 7th and another from the 7th to the 9th

12: Place standard and hatch platforms on the 8th rung, ensure that the hatch is positioned to the ladder end and opens to the outside edge. Check the platforms are secure and level then lock windclips. Using the 3t method of assembly, fit horizontal bracing on the 9th and 10th rungs. The platform is now safe to stand on.

13: Fit toeboards then carryout final inspection before use.

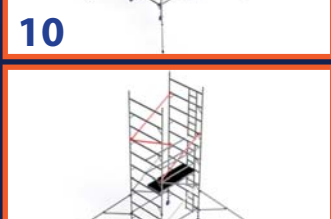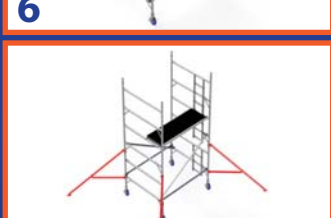

3.2m Tower Build

1: Fit leg and castor assembly into the 4 rung ladder frame, repeat with the 4 rung span frame.

2: Fit the 1st horizontal brace on frame horizontal at ladder side then the 2nd on the upright as shown.

3: Attach both horizontal braces to the Span frame as shown in the illustration.

4: Fit 2 diagonal braces in opposing direction from the 1st rung to the 3rd rung as shown.

5: Place platform on the 2nd rung ensuring hatch is to the ladder end and it opens outwards. Ensure wind clips are locked. Using the 3t method of assembly, fit horizontal bracing on the 3rd and 4th rungs above the hatch platform. The platform is now safe to stand on.

6: Fit stabilisers ensuring that the maximum footprint is achieved.


7: Fit 4 rung ladder and span frames, ensure the circlips are locked.

8: Fit 2 diagonal braces diagonally opposed from the 3rd rung to the 5th rung. Fit another diagonal brace from the 5th rung to the 7th.

9: Place standard and hatch platforms on the 6th rung, ensure that the hatch is positioned to the ladder end and opens to the outside edge. Check the platforms are secure and level then lock the wind clips.

10: Using the 3t method of assembly, fit horizontal bracing on the 7th and 8th rungs. The platform is now safe to stand on.

11: Fit toeboards then carryout final inspection before use.

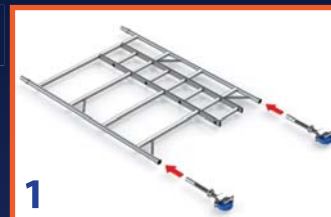

If you have any questions or need help assembling your tower please call us on 01792 796666

1.7m Base Out*

*First stage of configuration

1: Fit leg and castor assembly into the 2 rung ladder frame, repeat with the 2 rung span frame.

2: Fit the 1st horizontal brace on frame horizontal at ladder side then the 2nd on the upright as shown.

3: Attach both horizontal braces to the span frame as shown in the illustration.

4: Fit 3 rung ladder and span frames, ensure the circlips are locked.


5: Fit 2 diagonal braces in opposing direction from the 1st rung to the 3rd rung as shown.

6: Place platform on the 3rd rung ensuring hatch is to the ladder side and it opens outwards. Check the platform is secure and level then lock the wind clips.

7: Fit stabilisers ensuring that the maximum footprint is achieved.

8: Using the 3t method of assembly, fit horizontal bracing on the 4th and 5th rungs. The platform is now safe to stand on.

This base out will allow the operative to achieve 1.7m, 3.7m, 5.7m 7.7m, 9.7m and 11.7 platform heights

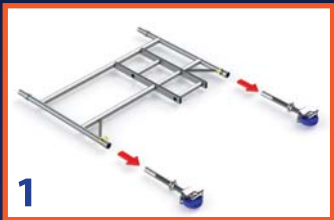

2.7m Base Out*

*First stage of configuration

1: Fit leg and castor assembly into the 3 rung ladder frame, repeat with the 3 rung span frame.

2: Fit the 1st horizontal brace on frame horizontal at ladder side then the 2nd on the upright as shown.

3: Attach both horizontal braces to the span frame as shown in the illustration.


4: Fit 2 diagonal braces in opposing direction from the 1st rung to the 3rd rung as shown. Fit 4 rung ladder and span frames, ensure the circlips are locked.

5: Fit another 2 diagonal braces diagonally opposed from the 3rd rung to the 5th rung.

6: Fit stabilisers ensuring that the maximum footprint is achieved.

7: Place platform on the 5th rung ensuring hatch is to the ladder end and it opens outwards. Check the platform is secure and level then lock the wind clips. (Please note you may need to use a platform on the 1st rung) Using the 3t method of assembly, fit horizontal bracing on the 6th and 7th rungs. The platform is now safe to stand on.

This base out will allow the operative to achieve 2.7m, 4.7m, 6.7m 8.7m, 10.7m and 12.7 platform heights

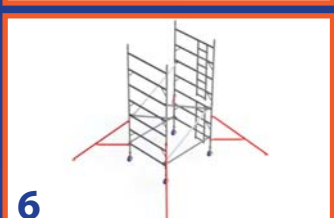

Toeboard Fitting

- 1:** Deployed
2: Folded

Toeboards fitted as illustrated



Component Schedule

1.8M SINGLE WIDTH (0.85M) 3T	Platform Height	2.2	2.7	3.2	3.7	4.2	4.7	5.2	5.7	6.2	6.7	7.2	7.7	8.2	8.7	9.2	9.7	10.2	10.7	11.2	11.7	12.2
Dual Locking Castors		4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4
Adjustable Leg Unit		4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4
2 Rung Single Width Guardrail Frame		1			1	1			1	1			1	1			1	1			1	1
2 Rung Single Width Ladder Frame		1			1	1			1	1			1	1			1	1			1	1
3 Rung Single Width Ladder Frame			1				1			1		1			1			1		1		
3 Rung Single Width Span Frame			1		1		1			1		1			1			1		1		
4 Rung Single Width Ladder Frame		1	1	2	1	2	2	3	2	3	3	4	3	4	4	5	4	5	5	6	5	6
4 Rung Single Width Span Frame		1	1	2	1	2	2	3	2	3	3	4	3	4	4	5	4	5	5	6	5	6
1.8m Hatch Deck		1	2	2	2	2	3	3	3	3	4	4	4	4	5	5	5	5	6	6	6	6
1.8m Horizontal Brace		6	6	10	10	10	14	14	14	14	18	18	18	18	22	22	22	22	26	26	26	26
2.1m Diagonal Brace		3	5	5	7	7	9	9	11	11	13	13	15	15	17	17	19	19	21	21	23	23
1.8m Toeboard Folding		1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
Standard Stabiliser Unit		4	4	4	4	4	4	4	4													
Large Stabiliser Unit										4	4	4	4	4	4	4	4	4	4	4	4	4
1.8M DOUBLE WIDTH (1.45M) 3T	Platform Height	2.2	2.7	3.2	3.7	4.2	4.7	5.2	5.7	6.2	6.7	7.2	7.7	8.2	8.7	9.2	9.7	10.2	10.7	11.2	11.7	12.2
Dual Locking Castors		4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4
Adjustable Leg Unit		4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4	4
2 Rung Double Width Guardrail Frame		1			1	1			1	1			1	1			1	1			1	1
2 Rung Double Width Ladder Frame		1			1	1			1	1			1	1			1	1			1	1
3 Rung Double Width Ladder Frame			1		1		1			1		1			1			1		1		
3 Rung Double Width Span Frame			1		1		1			1		1			1			1		1		
4 Rung Double Width Ladder Frame		1	1	2	1	2	2	3	2	3	3	4	3	4	4	5	4	5	5	6	5	6
4 Rung Double Width Span Frame		1	1	2	1	2	2	3	2	3	3	4	3	4	4	5	4	5	5	6	5	6
1.8m Standard Deck		1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
1.8m Hatch Deck		1	2	2	2	2	3	3	3	3	4	4	4	4	5	5	5	5	6	6	6	6
1.8m Horizontal Brace		6	6	10	10	10	14	14	14	14	18	18	18	18	22	22	22	22	26	26	26	26
2.1m Diagonal Brace		3	5	5	7	7	9	9	11	11	13	13	15	15	17	17	19	19	21	21	23	23
1.8m Toeboard Length		1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
Standard Stabiliser Unit		4	4	4	4	4	4	4	4													
Telescopic Stabiliser Unit										4	4	4	4	4	4	4	4	4	4	4	4	4

01792 796666

sales@lyteladders.co.uk

www.lyteladders.co.uk

